

Remote Programming Set Up Guide

The lift mechanism in the Touchstone Flat Panel Television Cabinet can be set at a desired height. The following is a set of instructions for setting the desired height for the television to your liking.



fig 1



fig 2

1. Locate the lift control box inside the unit. The box will normally be located in the upper right-hand corner of the unit (fig 1).
2. Using this remote, use the down button to lower the TV to its lowest position.
3. Once the TV is lowered all the way, press the UP button to raise the TV. While the TV is raising out of the cabinet, move to step 4.
4. Once the TV gets to the desired position, press the SET button once to STOP THE LIFT. Then press the SET button again to SET THE POSITION OF THE LIFT. The green light will turn off and then back on.
5. On the external remote (fig 2), press the DOWN arrow to lower the TV into the cabinet.
6. Once the TV is fully lowered into the cabinet, press the RECALL button and the TV will raise to the desired height that you set in step 4.

*CAUTION: Be sure to test this process in an area where the TV will not hit anything above it. Once you are comfortable with the set height of the TV, then place the cabinet in the location of your choosing.