

Setting the Security Code

All security settings must be done from the handset, not the remote controller (fig 1)

1. To access the protection mode or reset back to the normal run mode:

Hold the “down” key, don’t release, and press the “up” key 3 times. This action will be the status exchange.

The LED will then flash, that means you are now within Protection/Security Mode.

Repeating same action as above will restore setting back to the Normal Run Mode. The LED will light without flash.



fig 1

2. If within protection mode, there are 2 sub-modes:

Hold the “down” key, don’t release, press the “up” key 2 times, this action will be the status exchange for the 2 sub-modes that lie within the protection mode:

A-Active Mode: the LED will flash slowly, allowing you do any action to the lift. If you do not press any buttons for 5mins, the sub mode will change to B mode (see below).

B-Lock Mode: the LED will flash quickly, locking the system. The system is fully locked all the time.

To return to Active Mode (A) hold the “down” key, don't release, and press the “up” key 2 times.

To return to Normal Run Mode, just hold the "down" key, don't release, press the “up” key 3 times.